
MACHINE SERVICE BULLETIN NO. 285

SUBJECT: Adjustable Stop -- LA-6 Model

DATE: September 27, 1937

TO ALL OFFICES:

This Bulletin illustrates and describes the installation of the new adjustable stop which replaces the original 49105, for controlling the rearward movement of the 49050 link (H) when the multiplication lever or division lever is automatically restored to neutral.

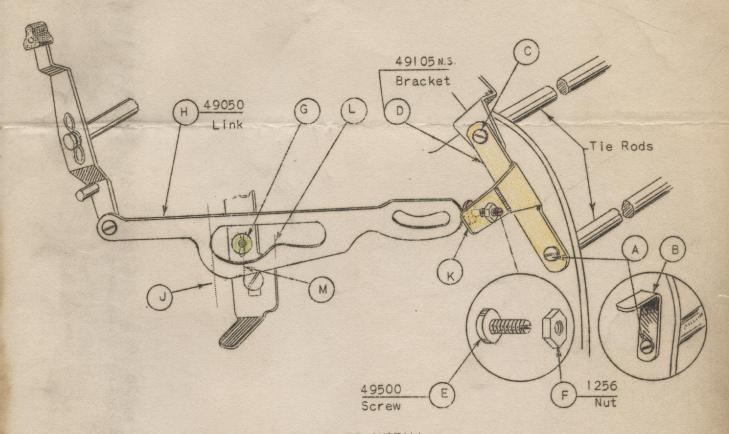

HOW TO INSTALL

- 1. Remove tie rod screw (A) and original 49105 stop bracket (B).
- 2. Remove tie rod screw (C).
- 3. Assemble screw (E) and nut (F) in place on bracket (D) as shown.
- 4. Install bracket (D) in place as shown and secure with screws (A) and (C) previously removed.
- 5. With the division and multiplication levers in neutral, adjust screw (E) inward or outward until roller (G) locates centrally between points (J) and (L) at (M).
- 6. Lock the adjustment of screw (E) in place with nut (F).

NOTE: In some instances it may be necessary to remove stock from the end of the 49105 bracket at (K) to permit alignment of the rear cover case screw holes.

MATERIAL TO REQUISITION

- 1 49105 N.S. Bracket @ No charge
 - 49500 Screw @ " "
- 1 1256 Nut @ " "

Mr. J. W. Hunt Toledo, Ohio and the the unen the multiplication level or division them to automatically Agency tie tot corew IA; and original colog stop ers pumps number on (OF constant of Spart of 197 sun cas for warms of consent this serse with bracket to line slace as shown and secure with serewa this Apple evenus pt wassesses of yes if except ency of three